

## MB019 CPF/CKDF Multi-Bay Backplane Module




### INSTALLATION GUIDE




### • Front-panel description

MB019 CKDF

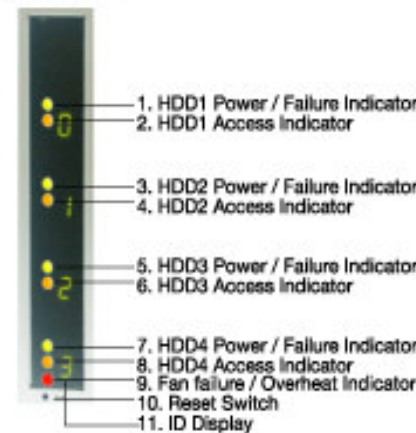

MB019 CPF

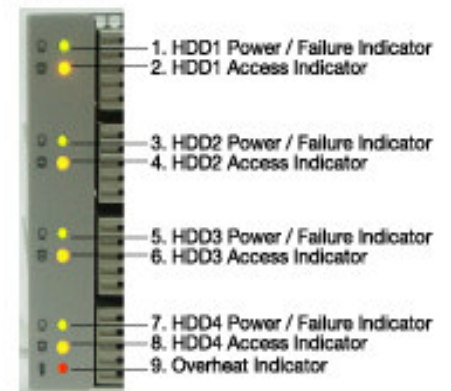

### • Content Description



• Removable Hard Drive  
Enclosure Rack Kit



• Accessory bag  
6#-32 Flat Head screw x 16 pcs  
6#-32 Truss Head screw x 16 pcs  
Miniature key x 2  
Key x 2 (MB019CKDF only)



• Installation Guide

### • Failure indicators description


#### A. MB019CKDF

- a.1-When housing temperature exceeds the preset temperature setting, the Failure Indicator will indicate Amber color and the alarm buzzer sounds.
- a.2-When fan becomes dysfunctional, the Failure Indicator will indicate Red color and the alarm buzzer sounds.
- a.3-Deactivate the alarm buzzer by pressing the Reset button.
- a.4-The Failure Indicator will still indicate Amber ( or Red ) and will not revert until the failure is properly repaired.

#### B. MB019CPF

- b.1-When housing temperature exceeds the preset temperature setting, the Failure Indicator will indicate Red color.
- b.2-The Failure Indicator will still indicate Red and will not revert until the failure is properly repaired.

### • Back-plane description

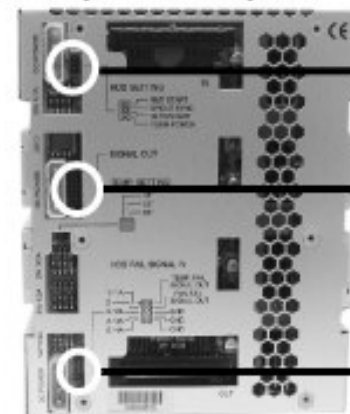


#### • HDD - Power/Access

1	2	P1.Power LED 1 (+)	P2.Power LED 1 (-)
3	4	P3.HDD Access 1 (+)	P4.HDD Access 1 (-)
5	6	P5. -----	P6. -----
7	8	P7. -----	P8. -----
9	10	P9.Power LED 2 (+)	P10.Power LED 2 (-)
11	12	P11.HDDAccess 2 (+)	P12.HDD Access 2 (-)
13	14	P13.Power LED 3 (+)	P14.Power LED 3 (-)
15	16	P15.HDD Access 3 (+)	P16.HDD Access 3 (-)
17	18	P17.Power LED 4 (+)	P18.Power LED 4 (-)
19	20	P19.HDD Access 4 (+)	P20.HDD Access 4 (-)

#### • TEMP Setting Jumper



#### • HDD -Fail signal

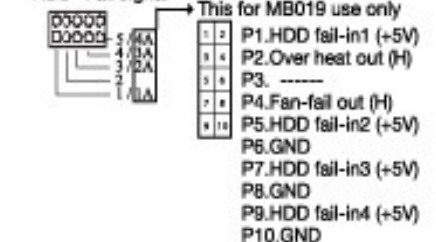

#### • ID Setting

Dip switch No.	1	2	3	4
Digital signal	1	2	4	8