 


INSTALLATION GUIDE

 
MB 449SK Internal Removable HDD Rack



Contents Description



Removable Hard Drive Enclosure Rack Kit




Installation Guide

- miniature key *2 pieces
- M3 x 6 screw *4 pieces
- #6-32 screw *4 pieces
- ø3X6 self type screw *4 pieces

<1.> Appearance

1-1 Front Panel Description:

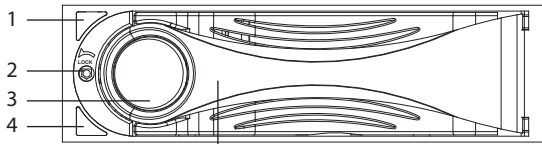

- 1. Power Indicator
- 2. Key hole
- 3. Release Button
- 4. HDD Access Indicator
- 5. Handle

1-2 Power and HDD Access indicator:

1-2-1 When power is turned on, signals will display as follow.

LED Indicator	Color
Power On	Green
HDD Access	Blinking Amber


1-3 Key lock description:

Status	Security status
	Unlocked (Removable)
	Locked (Non-removable)

1-4 Back Panel Description:

- A. DC Power Supply Male connector
- B. Signal Output/Input

- P1.Power LED (+) P2.Power LED (-)
- P3.HDD Access OUT (+) P4.HDD Access OUT(-)
- P5.HDD Access IN (-) P6.GND

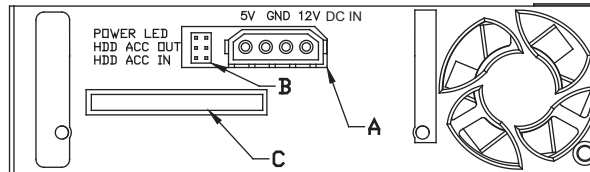


C.SATA 7 pins (Data)+15 pins (Power) Male connector.

<2.> Installing the device


Step1:

1-1. Push the release button to semi-auto eject the handle.(Fig.1)

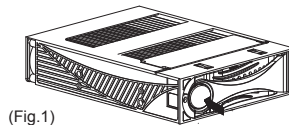

(Fig.1)


1-2. Release the tray from housing by pulling the handle to draw it out. (Fig.2)

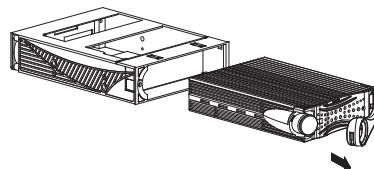

(Fig.2)

Step2:

 
2-1. Press the latch and slide the top cover backward.(Fig.3)



(Fig.3)

Step3:


3-1. Position the HDD into the tray and secure it with four #6-32 screws.(Fig.4)

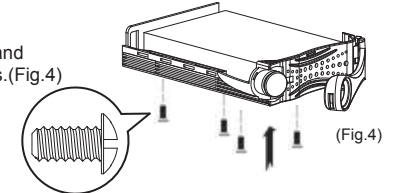

(Fig.4)

Step4:

 
4-1. Place the top cover on the tray and slide it forward to secure.(Fig.5)



(Fig.5)


Step5:

 5-1. Insert the tray into the housing and push it back gently.(Fig.6)



(Fig.6)

 
5-2. Push the handle back to its original position. (Fig.7)



(Fig.7)

Step6:

6-1. Mount the mobile rack into computer chassis. Then connect the SATA cable and DC power cable to the back panel of mobile rack. (Fig.8)

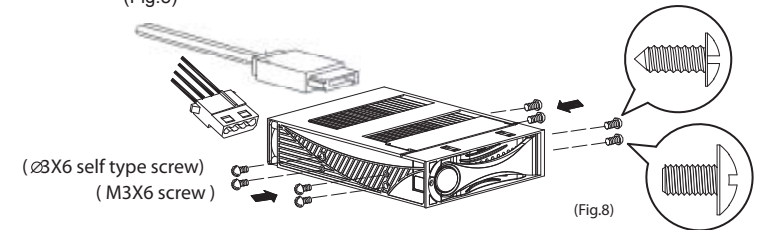

(Fig.8)

6-2. Insert the miniature key and turn it counter-clockwise to secure the handle.(Refer to Appearance section 1-3 Key Lock Description)

6-3. It is not necessary to connect the power supply connector when power supply is provided with SATA 15pins power connector. Users can decide which power connector they want to use.

Note:

- For further inquiries about product application or for more related product information, please linked to: www.icydock.com.
- Any unrelated changes on the technical specification are subject to change without prior notice.
- Cremax will not be liable / responsible for any software, hardware, or other data stored within, or interfacing with our product which resulted to being damaged / dysfunctional. Cremax will only be responsible to repair / service its own product.